MANUAL DE INSTRUCCIONES
TELEVISOR LCD PORTÁTIL (7”)
TV-2758TFT

ESTIMADO CLIENTE

Con el fin de que obtenga el mayor desempeño de su producto, por favor lea este manual de instrucciones cuidadosamente antes de comenzar a utilizarlo, y guárdelo para su futura referencia.
Si necesita soporte adicional, no dude en escribir a: ***info@premiermundo.com***

PRECAUCIÓN
RIESGO DE CHOQUE ELÉCTRICO , NO ABRA
Precaución: Para reducir el riesgo de choque eléctrico, no retire la cubierta, no hay partes manipulables por el usuario al interior de la unidad. Refiera todo mantenimiento o intervención técnica a personal técnico calificado.
Este símbolo indica la existencia de voltaje peligroso al interior de esta unidad que constituye un riesgo de choque eléctrico.
Este símbolo indica que hay importantes instrucciones de operación y mantenimiento en la literatura que acompaña a esta unidad.

LÍNEAS DE SERVICIO AL CLIENTE PREMIER

Venezuela:	0800 – ELECTRIC (353-2874)
Colombia:	01-900-331-PEJC (7352)
Panamá:	300-5185
Sitio Web:	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTA
Nos reservamos el derecho de modificar las especificaciones, características y/u operación de esta unidad sin previo aviso, con el fin de continuar las mejoras y desarrollo del mismo.

ÍNDICE

RECOMENDACIONES 4
INSTRUCCIONES DE SEGURIDAD 4
DESCRIPCIÓN DE LA UNIDAD 5
FUNCIONES DE LA UNIDAD 6
FUNCIONES DEL CONTROL REMOTO 7
CANALES +/- 7
SELECCIÓN +/- 7
OK/MÚSICA 7
PICTURE (IMAGEN) 7
ENCENDER 7
MENÚ/TARJETA 7
MUTE (SILENCIADOR) 7
CALL (MOSTRAR INFORMACIÓN) 7
SLEEP (TEMPORIZADOR) 7
MODO 7
SEARCH (BÚSQUEDA) 7
RETURN (REGRESAR) 7
S. SHOW (PRESENTACIÓN DE IMÁGENES) 7
BOTONES NUMÉRICOS 8
P. ADJ. (AJUSTE DE IMAGEN) 8
VOL+ 8
VOL- 8
ADELANTAMIENTO RÁPIDO 8
RETROCESO RÁPIDO 8
REPRODUCIR / PAUSAR 8
DETENER 8
ZOOM 8
SIGUIENTE PISTA 8
PISTA ANTERIOR 8
SONIDO 8
REPETIR 8
CONEXIONES 9
CONEXIÓN ELÉCTRICA 9
CONEXIÓN DE LA ANTENA 9
CONEXIÓN DE CONVERSIÓN AV 9
CONEXIÓN PARA VISTA POSTERIOR 9
OPERACIÓN DEL MENÚ 10
PICTURE (IMAGEN) 10
OPTION (OPCIÓN) 10
CLOCK (RELOJ) 10
SYSTEM (SISTEMA) 10
PREAJUSTE 11

ANTENA 11
MODO DE OPERACIÓN DE TARJETA 12
REPRODUCCIÓN DE ARCHIVOS MULTIMEDIA 12
RESOLUCIÓN DE PROBLEMAS 14
ACCESORIOS 14
ESPECIFICACIONES 15

RECOMENDACIONES

- Mantenga la unidad alejada de fuentes de calor o frío excesivo. La temperatura de almacenamiento es de -40 ~ 60°C y la temperatura de operación es de 0 ~ 40°C.
- Mantenga la unidad lejos de áreas húmedas o con mucho polvo o suciedad.
- Coloque la unidad en una base firme para evitar que se caiga.
- No utilice la unidad cerca de áreas con agua como por ejemplo la ducha, el lavamanos o la piscina.
- No manipule la unidad con objetos puntiagudos.
- Limpie la unidad con una prenda húmeda suave. No utilice ningún químico como por ejemplo benzina, tiner o alcohol.

⚠*INSTRUCCIONES DE SEGURIDAD*

- Utilice únicamente los adaptadores de corriente adecuados para la unidad.
- Desconecte la unidad cuando no la esté utilizando.
- Evite mirar televisión mientras conduce.
- Es normal que se presenten algunos puntos oscuros en la pantalla LCD los cuales no representan un fallo de la pantalla. Apague la pantalla y enciéndala.
- No intente reparar la unidad usted mismo. Remita cualquier revisión o mantenimiento a personal de servicio técnico calificado.
- Si utiliza los audífonos mantenga un nivel de volumen suave a moderado para proteger sus oídos.
- Para prevenir accidentes, este equipo debe ser puesto fijamente al piso o pared siguiendo las instrucciones de instalación.

DESCRIPCIÓN DE LA UNIDAD

1. ANTENA TELESCÓPICA
2. PANTALLA TFT LCD
3. INDICADOR DE ENCENDIDO
   ROJO: STANDBY / VERDE: ENCENDIDO
4. ENCENDER/MODO
5. PRESENTACIÓN DE IMÁGENES
6. MUTE/IMAGEN
7. OK/MÚSICA
8. VOL-/IZQUIERDA
9. VOL+/DERECHA
10. SALIR/MENÚ
11. CANAL-/SELECCIÓN-
12. CANAL +/SELECCIÓN +
13. RECEPTOR DE CONTROL REMOTO
14. CONECTOR USB
15. ENTRADA DE TARJETA SD/MMC/MS

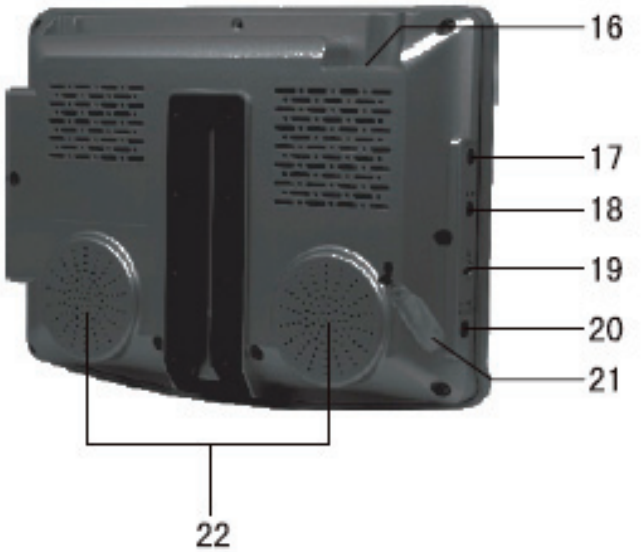

16. CONECTOR DE ANTENA EXTERNA
17. SALIDA AV
18. ENTRADA AV
19. CONECTOR DE AUDÍFONOS
20. ENTRADA DC
21. CONEXIÓN PARA VISTA
    POSTERIOR DEL AUTOMÓVIL
22. PARLANTE

FUNCIONES DE LA UNIDAD

1. ENCENDER/MODO
Presione este botón para encender la unidad y también para cambiar de modo entre TV/TARJETA/AV. Manténgalo presionado para entrar a modo Standby.

2. PRESENTACIÓN DE IMÁGENES
Presione en el modo de tarjeta para ver las imágenes en el modo de presentación.

3. MUTE/IMAGEN
En los modos TV/TARJETA/AV, presiónelo de forma corta para silenciar el sonido y una vez más para restaurarlo. Manténgalo presionado 3 segundos para entrar al modo de configuración de imagen.

4. OK (CONFIRMAR)/MÚSICA
Presione este botón para confirmar las selecciones que haga. Manténgalo presionado por más de 3 segundos para que funcione cómo búsqueda automática en el modo de TV. Igualmente úselo para seleccionar o cancelar la música de fondo en el modo de TARJETA.

5. VOLUMEN -/SELECCIÓN ◄
Presione este botón para disminuir el volumen o cómo botón de navegación hacia la izquierda.
Manténgalo presionado por más de 3 segundos para que funcione como volumen en el modo de tarjeta.

6. VOLUMEN +/SELECCIÓN ►
Presione este botón para aumentar el volumen o cómo botón de navegación hacia la derecha. Manténgalo presionado por más de 3 segundos para que funcione como volumen en el modo de TARJETA.

7. SALIR/MENÚ
Presiónelo para en los modos TV/AV para regresar al punto anterior o manténgalo presionado para entrar al Menú OSD. En el modo de tarjeta para regresar y para abrir la opción de Menú en el modo de imagen o video y para cambiar entre Tarjeta y USB.

8. CANAL -/SELECCIÓN ▼
Presione este botón para disminuir el número del canal o cómo botón de navegación hacia abajo.

9. CANAL +/SELECCIÓN ▲
Presione este botón para aumentar el número del canal o cómo botón de navegación hacia arriba.

FUNCIONES DEL CONTROL REMOTO

CANALES +/-
Utilice estos botones para aumentar o disminuir de canal.

SELECCIÓN +/-
Utilice estos botones para moverse entre los ítems y ajustar niveles.

OK/MÚSICA
En el modo de tarjeta presione para confirmar y en el modo de presentación de imágenes para activar o desactivar la música de fondo.

PICTURE (IMAGEN)
Con este botón cambia entre modos de imagen.

ENCENDER
Presione este botón para encender y apagar la unidad.

MENÚ/TARJETA
Al presionarlo entra al menú donde tiene diferentes opciones de configuración y para cambiar entre tarjeta y USB.

MUTE (SILENCIADOR)
Presione este botón para cancelar el audio. Presiónelo de nuevo para activarlo o utilice el volumen.

CALL (MOSTRAR INFORMACIÓN)
Presione este botón para mostrar información en pantalla.

SLEEP (TEMPORIZADOR)
Úselo para programar el momento en que se apaga la unidad en un lapso máximo de 120 minutos.

MODO
Presione este botón para cambiar entre los modos de TV/TARJETA/AV.

SEARCH (BÚSQUEDA)
En el modo de TV presione este botón para hacer una búsqueda automática de canales.

RETURN (REGRESAR)
En el modo de TV úselo para ir al canal donde estaba anteriormente. En el modo de TARJETA úselo para ir al menú anterior.

S. SHOW (PRESENTACIÓN DE IMÁGENES)
Úselo para activar esta función.

BOTONES NUMÉRICOS
Utilice los botones del 0 al 9 y (- / --) para elegir el canal que necesite. Si el canal es de un solo dígito, presione el botón para ir directamente. Si el canal es de 2 dígitos, presione (- / --) para introducir el número completo.

P. ADJ. (AJUSTE DE IMAGEN)
Presiónelo para hacer ajustes de imagen.

VOL+
Aumentar volumen

VOL-
Disminuir volumen

▶▶ *ADELANTAMIENTO RÁPIDO*
Solo disponible en el modo de Tarjeta

◀◀ *RETROCESO RÁPIDO*
Solo disponible en el modo de Tarjeta

▶II *REPRODUCIR / PAUSAR*
Solo disponible en el modo de Tarjeta

■ *DETENER*
Solo disponible en el modo de Tarjeta

ZOOM
Presione este botón para agrandar o disminuir la imagen (Solo disponible en el modo de Tarjeta)

▶▶I *SIGUIENTE PISTA*
Solo disponible en el modo de Tarjeta

I◀◀ *PISTA ANTERIOR*
Solo disponible en el modo de Tarjeta

SONIDO
Cambiar sistema de audio / sonido de pistas

REPETIR
Solo disponible en el modo de Tarjeta

CONEXIONES

CONEXIÓN ELÉCTRICA

Conecte el adaptador AC al orificio marcado como DC12V.

CONEXIÓN DE LA ANTENA

Conecte la antena en orificio correspondiente.

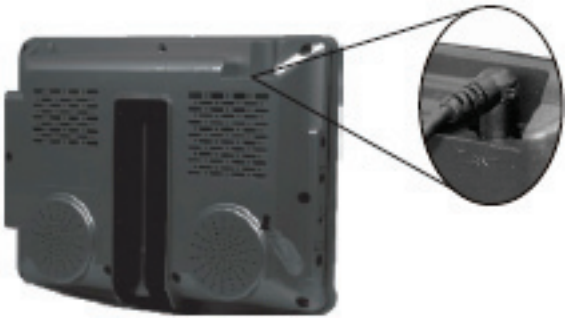

Cable de conversión de antena 75 Ω

CONEXIÓN DE CONVERSIÓN AV

Inserte el cable de video externo al puerto de color amarillo del convertidor, el cable de audio izquierdo en el puerto blanco y el audio derecho en el puerto rojo. Ahora conecte el adaptador en la entrada del televisor. Utilice tanto la función de entrada como la función de salida (Salida AV solo disponible en modo de Tarjeta).

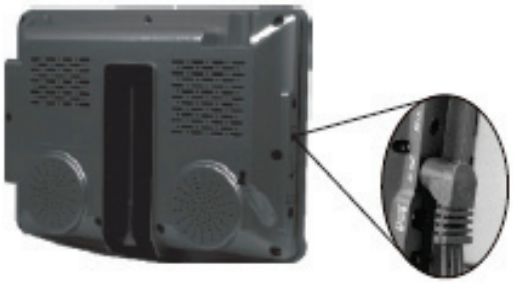

Cable de conversión AV

CONEXIÓN PARA VISTA POSTERIOR

Conecte el cable como se muestra en el diagrama. Un extremo a la unidad y el otro extremo al conector de vista posterior del automóvil. Sólo disponible si el automóvil cuenta con esta función.

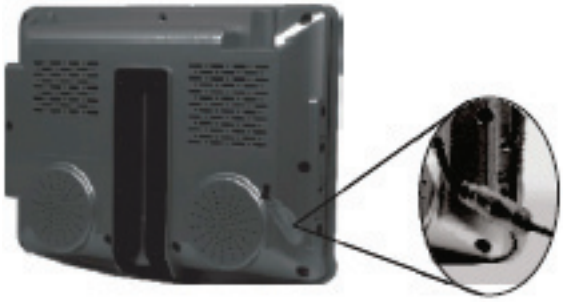

OPERACIÓN DEL MENÚ

El menú trae las siguientes funciones: Picture, Option, Clock, System, Preset (Imagen, Opción, Reloj, Sistema, Preajuste.)

PICTURE (IMAGEN)

Estas son las opciones para modificar: Contraste, Brillo, Color, Nitidez y Tinte. Utilice los botones de navegación para moverse por la lista y hacer los cambios.

NOTA

La opción de TINTE solo aparece cuando se está configurado en el sistema NTSC.

OPTION (OPCIÓN)

Estas son las opciones de esta función: Idioma, Calendario, Juego. Utilice los botones de navegación para moverse por la lista y hacer los cambios.

IDIOMA

Elija entre uno de los idiomas del menú OSD con los botones de navegación de Izquierda y Derecha.

CALENDARIO

Ajuste la fecha adecuada con los botones de navegación.

JUEGO

Utilice los botones de navegación para moverse en las distintas direcciones. Con el botón de arriba, usted gira el juego 360°.Presione el botón POWER para salir del juego.

NOTA

Si existe una señal débil mientras está jugando, la barra de juego aparecerá un poco cambiada por este motivo. Recomendamos que entre al modo de video antes de comience a jugar de nuevo.

CLOCK (RELOJ)

Las opciones de esta función son: Tiempo, Tiempo Encendido, Tiempo Apagado, Atención, Tiempo a la Medida, Posición. Utilice los botones de navegación para moverse por las opciones y hacer los cambios respectivos.

SYSTEM (SISTEMA)

Las opciones de esta función son: Sistema de color, Fondo Azul, Horizontal, Vertical, Zoom. Utilice los botones de navegación para moverse por los ítems y hacer las modificaciones.

SISTEMA DE COLOR
Puede seleccionar las opciones Auto, Pal, SECAM. Elija la apropiada para que la imagen se vea correctamente. Se recomienda la posición Auto.

FONDO AZUL
Con esta opción usted puede activar o desactivar el color azul de fondo que posee la pantalla.

HORIZONTAL
Gire la imagen de forma horizontal con esta función.

VERTICAL
Gire la imagen de forma vertical con esta función.

PREAJUSTE
Las opciones son: Position, Remember, Antenna, Auto-Search (Posición, Recordar, Antena, Auto-Búsqueda.)

POSICIÓN
Ajuste esta opción con los botones de navegación.

RECORDAR
En esta opción, active o desactiva la función de recordar el canal de televisión.

ANTENA
Presione los botones de navegación para seleccionar “AIR, CATV-STD, CATV-HRC, CAT V-IRC”

AUTO-BÚSQUEDA
Presione los botones de navegación para iniciar la búsqueda automática. La estación radial con suficiente fuerza será memorizada y la búsqueda se detendrá.

NOTA
Si un canal con señal muy débil es recibido, el sistema de almacenamiento de canales lo identificara automáticamente como sin señal.

ANTENA
Con el objetivo de que la recepción de la señal sea lo mejor posible, ajuste la longitud, ángulo y dirección de la antena. Usted mismo puede observar cómo cambia la imagen según la posición de la antena. Una vez termine de usar la unidad, recuerde recoger la antena para evitar tropiezos.

NOTA
En caso de que la señal sea muy débil, la imagen se mantendrá de mala calidad o distorsionada lo cual no es una fallo de la unidad sino un fallo en la señal de TV debido a la ubicación geográfica. Si este es el caso, por favor use una antena externa o CATV.

MODO DE OPERACIÓN DE TARJETA

La unidad cuenta con un soporte para tarjeta SD, MMC, MS y memoria USB de máximo 2Gb. De esta forma usted puede reproducir en el televisor archivos de tipo JPEG, MP3, WMA, VCD, AVI, entre otros. (Excepto los formatos DIVX3.11 y AC3).

NOTA

- La unidad funciona de manera adecuado cuando los archivos están por debajo de 1000Kbps, pero se pueden presentar dificultades de operación si están por encima de esta velocidad.
- El conector USB no soporta dispositivos multi-media como por ejemplo disco duro, MP3 o MP4.
- Si observa algún inconveniente de funcionamiento con el dispositivo desconecte dicho dispositivo y espere unos segundos. Luego conecte de nuevo.

REPRODUCCIÓN DE ARCHIVOS MULTIMEDIA

1. Presione MODO para cambiar a modo de Tarjeta. En la interface están las opciones Photo, Music, Video, Slide Show y Setup (Imagen, Música, Video, Presentación de Imágenes y Configuración).
2. Inserte el dispositivo USB o la Tarjeta en la unidad. (Si ambas están conectadas, utilice el botón de menú para elegir una de las dos.

IMAGEN

1. Seleccione el ítem Photo y presione OK para confirmar.
2. Utilice los botones arriba/abajo para seleccionar las imágenes y presione OK para mostrarlas. También puede elegir la función de presentación de imágenes para cambiar el modo de presentación.
3. Presione el botón Menú para mostrar las funciones disponibles, o presiónelo dos veces para mostrar las propiedades de la imagen.
4. Para salir, presione el botón de menú 3 veces.
5. Cuando la imagen esté siendo proyectada, utilice los botones de dirección para rotar la imagen en las diferentes direcciones.
6. También puede utilizar las funciones Play, Pause, Stop, Siguiente, Anterior, Repetición, Rotar y Zoom para controlar el modo de reproducción.

MÚSICA

1. Seleccione el ítem Música y presione OK para confirmar.
2. Utilice los botones arriba/abajo para seleccionar los archivos de música y presione OK para confirmar.
3. Cuando aparezca el menú de función utilice los botones derecha/izquierda y presione OK.
4. Utilice la función de repetición según lo desee (repetir 1, repetir lista, repetir todos, normal).
5. Utilices las función Play, Pause, Stop, Siguiente, Anterior para controlar la reproducción.

VIDEO

1. Seleccione el ítem Video y presione OK para confirmar.
2. Utilice los botones arriba/abajo para seleccionar los archivos de video y presione OK para confirmar.
3. Presione el botón de menú para hacer ajustes de configuración.
4. También puede utilizar las funciones Play, Pause, Stop, Siguiente, Anterior, Repetición, Rotar y Zoom para controlar el modo de reproducción.

PRESENTACIÓN DE IMÁGENES

1. Seleccione el ítem Slide Show y presione OK para confirmar.
2. Utilice los botones arriba/abajo para seleccionar los archivos de imagen y presione OK para confirmar.
3. Presione el botón de Menú para hacer ajustes de configuración.
4. Recuerde que puede activar o desactivar la música de fondo con el botón OK.
5. Presione el botón Menú 2 veces para observar propiedades acerca de las imágenes.
6. Para salir, presione Menú 3 veces.

NOTA

Los idiomas disponibles para mostrar el nombre del archivo son Chino Simplificado, Chino Tradicional y Caracteres Internacionales Estándar. Si el nombre no está en estos lenguajes o es mayor a 8 caracteres se verá forma alterada.

CONFIGURACIÓN

1. Seleccione el ítem Setup y presione OK para confirmar.
2. Utilice los botones arriba/abajo para seleccionar las funciones y presione OK para confirmar: Efecto, Frecuencia, Sistema de TV, Idioma OSD, Restaurar.

RESOLUCIÓN DE PROBLEMAS

Esta lista es para su uso para aprender a resolver problemas simples de operación. Revísela ante cualquier dificultad. Si el problema persiste solicite ayuda de personal de servicio técnico autorizado.

PROBLEMA	CAUSA Y SOLUCIÓN
No enciende	Conexión inadecuada del adaptador AC o adaptador del automóvil. Fuente de energía inapropiada.
No hay imagen	Está en un canal sin señal. Verifique y configure los canales con señal.
No hay sonido	El volumen está abajo. La configuración de sistema de sonido no es la adecuada. Los audífonos están conectados.
La imagen está oscura	La configuración de la imagen tiene mal ajustado el brillo y contraste. Revise y ajuste. La temperatura ambiental es muy baja.
La imagen no está clara	La antena no está en la posición adecuada. La señal de TV es muy débil.
Se ve una imagen encima	La antena no está en la posición correcta. Un reflejo de otra unidad en otra área.
Se ve una corriente en la pantalla	Puede haber una interferencia con el motor, un tren, un área con alto voltaje o luces de neón.
La imagen está en blanco y negro	La configuración de color no es la adecuada. Verifique y ajuste. La señal es muy débil.
La imagen está invertida	Verifique el ajuste de las opciones Vertical y Horizontal.

ACCESORIOS

- Adaptador AC
- Adaptador para Automóvil
- Convertidor de Antena de 75Ω
- Control Remoto
- Convertidor de AV
- Antena telescópica

ESPECIFICACIONES

PANTALLA TFT LCD

Tamaño	7 Pulgadas
Resolución	1440 x 234 Pixeles

UNIDAD

Consumo de Energía	6 Vatios
Fuente de Energía	Adaptador AC / Adaptador para Automóvil 12V
Dimensiones	188 X 136.5 X 37.5 mm
Peso	516 g
Potencia de Salida	0.5 Vatios x 2
Parlante	4 cm (x2)
Rango de Frecuencia	48.25 ~ 863.25 MHz
Fuente de potencia Aplicable:	2 Opciones:

1. Fuente de Potencia AC
2. Adaptador Para Auto 12V ☐ 12-24V ☐

PREMIER®

INSTRUCTION MANUAL

7” TFT LCD MONITOR WITH ANALOG TV

TV- 2758TFT

DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

If you need extra support, please write to: ***info@premiermundo.com***

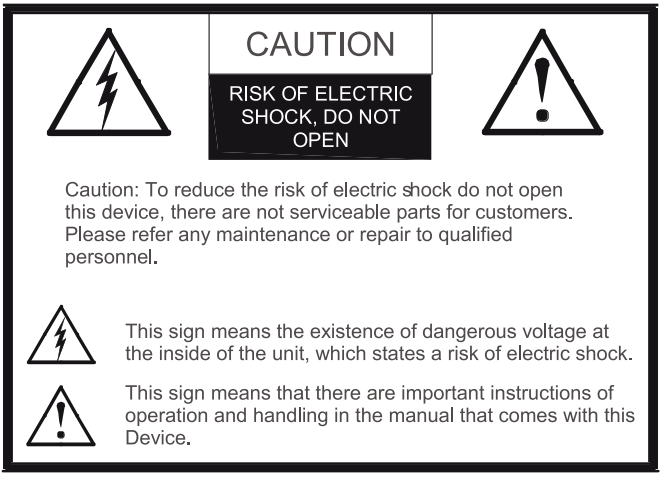
CAUTION
RISK OF ELECTRIC SHOCK, DO NOT OPEN
Caution: To reduce the risk of electric shock do not open this device, there are not serviceable parts for customers. Please refer any maintenance or repair to qualified personnel.
This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.
This sign means that there are important instructions of operation and handling in the manual that comes with this Device.

PREMIER CUSTOMER SERVICE

Venezuela:	0800 - ELECTRIC (353-2874)
Colombia:	01-900-331-PEJC (7352)
Panama:	300-5185
Website	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTE

This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

Table of Contents

1. Precautions 1
2. Accessories 2
3. Appearance 3
4. Description of Panel Buttons 4
5. Description of Buttons on Remote Control 5
6. Basic Operation Methods 6
7. Menu Operation 7
   7.1. PICTURE 7
   7.2. OPTION 7
   7.3. CLOCK 8
   7.4. SYSTEM 8
   7.5. PRESET 9
8. In order to receive clearer picture 10
9. CARD mode operation 11
10. Before you request for repair 15
11. Technical Parameters 16

1. Precautions

■ Storage

1. Keep this product away from extremely hot or cold places. The storage temperature ranges from -20℃ to 60℃ and the working temperature from 0℃ to 40℃.
2. Do not use this product at damp environment like bathtubs, wash basins, kitchens, washtubs, as well as basements, swimming pools or similar places.
3. Do not expose your TV set to high humidity, dust or oil smoke.
4. Do not throw or drop this product.
5. Do not subject this device to the inside of a case or strong vibrations, avoiding strong collision.
6. Do not push on or scrub this product with sharp objects.

■ Maintenance

1. Disconnect all cables of this device at first before cleaning.
2. Wipe the enclosure, screen and keys using soft cloth with a little soft detergent on.
3. Do not use polishing cloth, abstergent, and all types of propellants or chemical detergents like alcohol and benzene to clean your device.

⚠ Warning!

1. Do not watch television programs or turn your TV set on for your own and others' safety.
2. It is very dangerous to watch television programs or operate the TV set while driving.

⚠ Special Notice

Bright spots or dark spots may appear on the screen. This is a normal phenomenon associated with the active matrix display technology and is not a sign of malfunction. Do not attempt to maintain. For any failures, please turn off your TV set immediately and contact us or your dealer. This device integrates a great deal of fine electronic components. Disassembly or alternation may result in damages or breaks.

2. Accessories

1. Car adapter
2. AC adapter
3. 75 ohm antenna conversion cable
4. Remote control
5. AV conversion cable
6. Telescopic antenna

* Open the package and make sure all the items are included.

3. Appearance

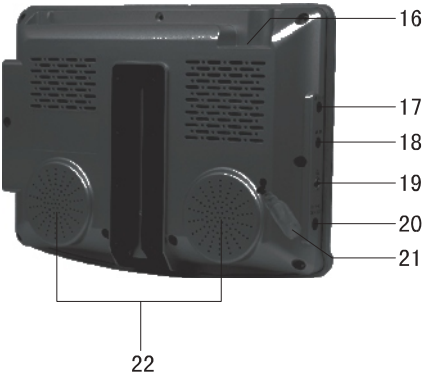

1. Telescopic antenna
2. TFT-LCD screen
3. Power indicator
   Red: Standby
   Green: Power-on
4. POWER/MODE: Standby/ Operation mode shift button
5. S.SHOW: Scan button
6. MUTE/PICT: Mute button/ picture mode shift button
7. OK/MUSIC: Confirm button /Music Background button
8. VOL-/◄: Volume down/ Left ward button
9. VOL+/►: Volume up/ Right ward button
10. EXIT/MENU: Return button/Menu button
11. CH-/▼: Channel Select/ Downward button
12. CH+/▲: Channel Select/ Upward button
13. Remote-control receive window
14. USB connect Jack
15. SD/MMC/MS type CARD input port
16. Antenna input Jack
17. AV Output
18. AV Input
19. Headphone jack
20. DC Input
21. Backing car connect line
22. Speaker

4. Description of Panel Buttons

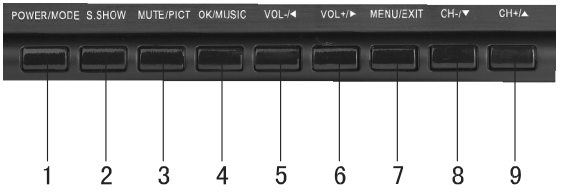

1. POWER/MODE: Under standby mode, press to turn ON. When the device is ON, press to switch between TV/CARD/AV mode. Keep pressing 3 seconds for standby.
2. S. SHOW: Under Card mode, when reading Picture or slide show, press to change next mode. (only available under CARD mode)
3. MUTE/PICT: Under TV/CARD/AV mode, short press to switch between MUTE and normal sound, keep pressing for 3 seconds to Picture mode switch.
4. OK/MUSIC: Under TV mode, keep pressing for 3 seconds for Auto-search; Under Card mode, press to confirm, when playing slide show, press to turn ON/OFF the background music.
5. VOL-/◄: Under TV mode, press as Volume down, under CARD mode, press as left selection key, keep pressing (3 seconds) as Volume down key.
6. VOL+/►: Under TV mode, press as Volume up, under CARD mode, press as right selection key, keep pressing (3 seconds) as Volume up key.
7. EXIT/MENU: Return button/Menu button; under TV/AV mode, shortly press for return button; a long press for OSD MENU; under CARD mode, shortly press for return button, press to open function MENU when playing picture or video, press to switch USB/CARD under main MENU.
8. CH-/▼: Under TV mode, press as Channels -, under OSD MENU or CARD mode, press as downward key.
9. CH+/▲: Under TV mode, press as Channels +, under OSD MENU or CARD mode, press as upward key.

5. Description of Buttons on Remote Control

- ▼/▲
  ▲ : the number of TV channel increases.
  ▼ : the number of TV channel decreases.
- ◄/►: To select program and adjust for selected program.
- OK/MUSIC: Under CARD mode, press to confirm, when playing slide show,press as ON/OFF for the background music.
- PICT: Picture mode shift.
- POWER: Power on/off.
- MENU: Under MENU/CARD mode, press to switch between USB and CARDin main interface.
- MUTE: Mute button.
- INFO: Press this button to display the character of program currently watching.
- SLEEP: Selecting the switch off time within 120 minutes.
- MODE: Press this button to switch between TV/CARD/ AV mode.
- SEARCH: Under TV mode, keep pressing (3 seconds) to Auto search. Under CARD mode, the movie playing can realize time selected function.
- ⮌ : Return button.
- S.SHOW: Scan button (only available under CARD mode).
- 0～9 (Digital key), -/--(Channel shift):
  On TV mode, use to choose the TV channel (TV mode only).
- P. ADJ: Picture adjust.
- VOL+: Volume +.
- VOL-: Volume -.
- ▶▶: Fast forward(only available under CARD mode).
- ◀◀: Fast backward(only available under CARD mode).
- ▶||: Play/pause(only available under CARD mode).
- ■: Stop (only available under CARD mode).
- ZOOM: Press to zoom in/out the image(only available under CARD mode).
- ▶▶|: Next track(only available under CARD mode).
- |◀◀: Previous track(only available under CARD mode).
- SOUND: Audio system/sound tracks switch.
- REP: Repeat(only available under CARD mode).

6. Basic Operation Methods

■ Basic interface connection

6.1 Connection of Power Supply:

Align the power supply plug on AC adapter with the jack on the machine rear cover marked with DC.

6.2 Connection of Antenna Cable:

75ohm antenna conversion line

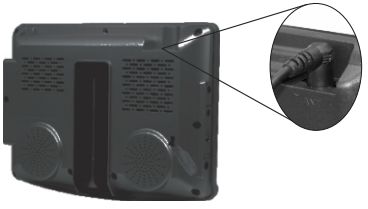

Align one end of the attached antenna cable plug in the antenna jack on TV set and the other end plug in the external antenna jack.

6.3 Connection of AV convert Cable:

AV conversion cable

6.3.1.AV input: Insert the external video cord into the yellow port of the AV convert cable, the left sound track into the white port and the right sound track into the red port. Then plug the AV convert cord in AV IN jack.

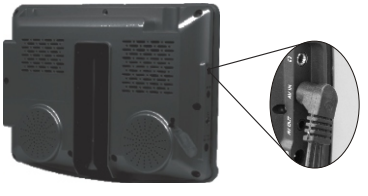

6.3.2.AV output: Insert the external video cord into the yellow port of the AV convert cable, the left sound track into the white port and the right sound track into the red port. Then plug the AV convert cord in AV OUT jack (AV OUT only in CARD mode) .

6.4 Connect diagram for rear-view connect cable:

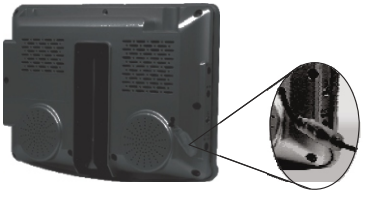

Connect one end of attached rear-view connect cable with unit, and the other end with car backing connector(only available for the machine with the function of backing).

7. Menu Operation

Press MENU to display options as follows:

PICTURE	OPTION	CLOCK
SYSTEM	PRESET	

7.1. PICTURE

CONTRAST, BRIGHT, COLOR, SHARP and TINT displays on the screen as below description:

Press ▲ or ▼ to select the item Press ◄ or ► to adjust

Notice

Only when displaying the picture of NTSC system, it will show the character of TINT in the Picture menu.

7.2. OPTION

LANGUAGE, CALENDAR and GAME displays on the screen as below description:

7.2.1.Press ▲ or ▼ to select the item LANGUAGE:
Press ◄ or ► to select multi language of OSD.

7.2.2.Press ▲ or ▼ to select the item CALENDAR:
Press ◄ or ► to select CALENDAR. Press ▲ or ▼ adjust year, and press ◄ or ► adjust month.

7.2.3.Press ▲ or ▼ to select the item GAME:
Press ◄ or ► then game begins, then press ◄ to move leftward, ► to rightward, ▼ to quick down and ▲ to rotate the game by 360 degrees. Press POWER to exit game and resume to TV or VIDEO status.

⚠ Notice

When play games under weak or no signal, the game bar will twist slightly. It is recommended to switch to video status before you playing the game again.

7.3. CLOCK

TIME, ON-TIME, OFF-TIME, ATTENTION, BESPOKE TIME and POSITION will display on the screen as below description:
Press ▲ or ▼ to select item, Press ◀ or ▶ to setup.

Notice

If you wish to setup other item, TIME must be setup. All items is 24 hours the most.

7.4. SYSTEM

COLOR-SYS, BLUE BACK, HORIZONTAL, VERTICAL and ZOOM displays on the screen as below description:

7.4.1.Press ▲ or ▼ to select the item COLOR-SYS:
Then press ▶ to revolve the screen in the order of AUTO, NTSC, PAL-M and PAL-N. Please choose carefully this systemcorrectly. Otherwise, it may cause achromatic or inferior color. It is recommended to select on AUTO position.

7.4.2.Press ▲ or ▼ to select the item BLUE BACK:
Press ◀ or ▶ can realize the ON/OFF of BLUE BACK under no signal.

7.4.3.Press ▲ or ▼ to select the item HORIZONTAL:
Press ◀ or ▶ can realize HORIZONTAL, press again to resumethe picture.

7.4.4.Press ▲ or ▼ to select the item VERTICAL:
Press ◀ or ▶ can realize VERTICAL flip, press again to resumethe picture.

7.4.5.Press ▲ or ▼ to select the item ZOOM:
Press ◀ or ▶ can realize the selection of picture modes:4:3 mode, and 16:9 mode.

7.5. PRESET

POSITION, REMEMBER, ANTENNA, and AUTO-SEARCH will display on the screen as below description:

7.5.1.Press ▲ or ▼ to select REMEMBER, and press ◄ or ► to select ON, this channel will be displayed when selected. When REMEMBER is OFF, this channel will not be displayed.

7.5.2.Press ▲ or ▼ to select "ANTENNA" :

Press ◄ or ► to select "AIR, CATV-STD, CATV-HRC, CAT V-IRC".

7.5.3.Press ▲ or ▼ to select AUTO-SEARCH:

Press ◄ or ► to start auto searching. Station of sufficient strength will be memorized and searching stops.

Notice:

If channel under weak signal is received, the channel storage system will automatically identify it as no signal.

8. In order to receive clearer picture

1 .Set the desired OSD language by pressing LANG.

2. Ensure the COLOR-SYS, SOUND-SYS is correct by checking from SYSTEM menu.

3. Select AUTO-SEARCH in PRESET menu, and start auto search TV signal.

4. Adjust the length, angle and direction of the telescopic antenna to obtain optimum image.

⚠ Notice

In case the signal intensity is too weak, the image will remain inferior whatever you adjust the antenna, and cause loud noise wave, shaking image and inferior sound, etc., which is not TV fault. If the image remains inferior when using telescopic antenna, please try to use the external antenna or CATV.

9. CARD mode operation

1. The right usage memory facility (USB&CARD)

The device supports almost all types of USB, Multi Media Card (MMC), SD, Memory Stick (MS) in the market.

1. The memory of different USB & CARD are require within 2G.
2. The device is able to read JPEG, MP3, WMA, VCD, AVI ect. (but do not support DIVX3. 11format and AC3 audio compress format)

⚠ Notice

1. Able to play very smoothly when data stream is below 1000KBP/S, it might pause when the data stream is above 1000KBP/S
2. The USB plug of this device do not support Multi-media devices such as Card reader, portable hard drive, MP3, MP4.
3. When facing problems from the device, please unplug the device for 5 seconds then re-start (reset)

2. Playing multi-media files

Press 'MODE', switch to CARD mode, in the interface there are 'PHOTO', 'MUSIC', 'VIDEO', 'SLIDE SHOW' and 'SETUP'. Insert USB or CARD (if USB and CARD are inserted at the same time, press MENU from the main interface to select either USB or CARD).

2.1. Reading Picture

2.1.1 Reading Picture

Use the direction key to select 'PHOTO', then press 'OK' to open file, press upward/downward to select picture, press 'OK' to read. When reading Picture, press 'S.SHOW' to change the impact of the display. Press 'MENU' for function menu; use left/right direction key to select function, press 'OK' to confirm; Press 'MENU' twice to show picture attribute; Press 'MENU' three times to exit.

When reading picture files, press ◀ ▶ ▲ ▼ direction key for fast operation of the following functions:

◀ Left direction key: anticlockwise 90°

▶ Right direction key: clockwise 90°

▲ Up direction key: up/down mirror

▼ Down direction key: left/right mirror

After all the above operations, press 'S.SHOW' to continue to read pictures.

2.1.2 Reading Picture

Use direction key to select 'PHOTO', press 'OK' to open file from the memory source; press right direction key to read 12 picture menu. Press direction key to select picture, press 'OK' to read.

2.1.3 Multimedia file list fast switch

Use direction key to select 'PHOTO', press 'OK' to open file from the memory source; press left direction key to switch between 'PHOTO', 'MUSIC', 'VIDEO' and 'SLIDE SHOW'.

Function Menu

⏯ : Play/ pause

⏹ : Stop

⏭ : Next

⏮ : Previous

🔁: Repeat, press 'OK' to selection repeat all, repeat list, repeat 1 and repeat OFF respectively.

: Circumgyrate; press 'OK' to selection ON/OFF; press left/right direction key for 90° Circumgyrate;

: Zoom: press 'OK' to select zoom; zoom2, zoom3, zoom4, zoom 1/2, zoom 1/3, zoom 1/4 and zoom OFF respectively; press direction to move picture.

⚠ Notice

Background music can not be open while reading picture, other function will not work when using zoom function.

2.2 Play music

Press direction key to select 'MUSIC', press 'OK' to open file from memory source; press ▲▼ direction key to select file, press 'OK' to play. Function menu will appear, use ◀▶ direction key to select function, then press 'OK' to confirm.

Function menu

🔁: Repeat; press 'OK' to select repeat 1, repeat list, reapeat all, repeat OFF.

⏭ : Next

⏮ : Previous

⏯ : Play/pause

2.3 Play movie

Press direction key to select 'VIDEO', press 'OK' to open file from the memory source, press ▲▼ direction key to select file, press 'OK' to play. Then press 'MENU' for function menu, use ◀▶ direction key to selection functions, then press 'OK' to confirm.

Function menu

II /▶ : Play/pause

■ : Stop

▶I : Next

I◀ : Previous

◀◀ : Fast backward

▶▶ : Fast forward

↻ : Repeat; press 'OK' to select repeat all, repeat list, repeat 1 and repeat OFF.

2.4 Slide show

Use direction key to select 'SLIDE SHOW', press 'OK' to open file from the memory source; press ▲▼ direction key to select file, press 'OK' to play. Then press MENU for function menu, use ◀▶ direction key to select functions, then press 'OK' to confirm. While playing, press 'OK' to turn ON/OFF background music, press 'VOL+ and VOL-' to adjust volume. Press MENU twice to view Picture attribute; press MENU three times to exit. (function menu remains unchanged in slide show and reading picture, for operation methods please refer to function menu manual under reading picture.)

⚠ Notice

The display languages of file name and movie name appeares to be simplified Chinese, traditional Chinese and international standard character, if languages display are not the above character or character over 8 digits, disorder characters will appear.

2.5 Setting

Use direction key to select 'SETUP', use ▲ / ▼ select up/down, use ◀ / ▶ select left/right, then press 'OK' to confirm.

2.5.1 Effect: enter to select the mode of display picture or play slide show.

2.5.2 Frequency: time setting for change picture display.

2.5.3 TV system: the TV system of external monitor must be the same to this device, setting can be made under this section.

2.5.4 OSD language: select OSD language.

2.5.5 Default: return to factory default, OSD language and other section will return to factory default setting.

10. Before you request for repair

Phenomena below does not necessarily mean failure with TV set.

Please check following before you request for repair.

Phenomena	Possible Causes
No picture, no sound	Improper connection with AC adapter or Care adapter. Use of unauthorized power supply. TV set is on standby status.
No image	Whether the correct Channel selected. Automatically set up the Receiving Channel again. Any new place is subject to re-setup of channels.
No sound	Whether the volume is turned to the end or the Sound System is incorrect. Whether earphone plugged in. Whether ERASE functions under too weak signal.
Dark picture	Whether brightness and contrast adjusted correctly; Whether environment temperature is too low.
Unclear or unstable image	Whether antenna adjusted correctly; Maybe too weak signal received at the receiving place.
Superposed image	Whether the antenna is in proper direction; Maybe received the building or reflected signals nearby.
Snowstorm	Maybe under wave interference of automobile motor, train, high voltage line and neon light.
Achromatic or flashing color	Whether color adjusted well, whether the decoloration actions under the Color system with too weak proper signal.
Upside down or lateral inverted picture	Improperly adjusted Horizontal or Vertical in the remote control.

11. Technical Parameters

Product Name: LCD Color TV Receiver
Display Device: Color TFT-LCD
Receiving frequency range: 48.25MHz~863.25MHz
Screen Size: 7 inches
Resolution: 1440 (H) × 234 (V)
Audio Output: 0.5 W×2(max)
Loudspeaker: two 4.0cm round loudspeaker.
Connecting Terminal: External antenna input jack, earphone jack, Audio / Video (AV) input/output jack, External power supply jack, the connect port for car reverse system(option) ▭.
Applicable Power Supply: Two options:

1. AC Power supply AC adapter
2. Car adapter 12V ▭ 12-24V ▭

Power Consumption: about 6W
Outer Dimension: 188mm × 136.5mm × 37.5mm
Weight: about 516g

⚠ Warning

This operation instruction is only intended for reference. No further notice is available to any modification of all information contained therein. Due to continuing improvements, the features and design are subject to change without notice.

⚠ Warning

No repairable components exist in the machine. Don't try to dismantle and improve the monitor, and the high voltage in the machine may cause danger. Maintenance and adjustment of the monitor is subject to professionals.

⚠ Warning

- To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- The mains plug is used as the disconnect device, the disconnect device shall remain readily operable, and it shall be disconnected from the mains completely.
- The plug is used as disconnect device form the mains supply, the plug shall remain readily operable.
- The apparatus should not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.

【☑ after some items in this manual means it is available with this function. 】